





NIC

Versión: 3.0

2 Groups

Instruction manual

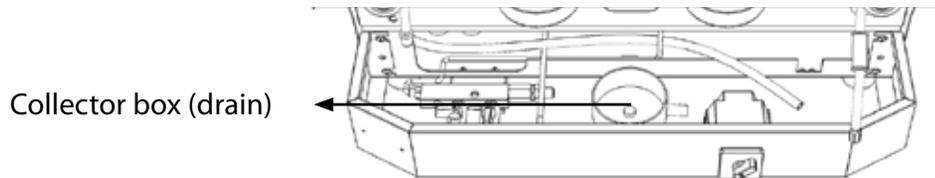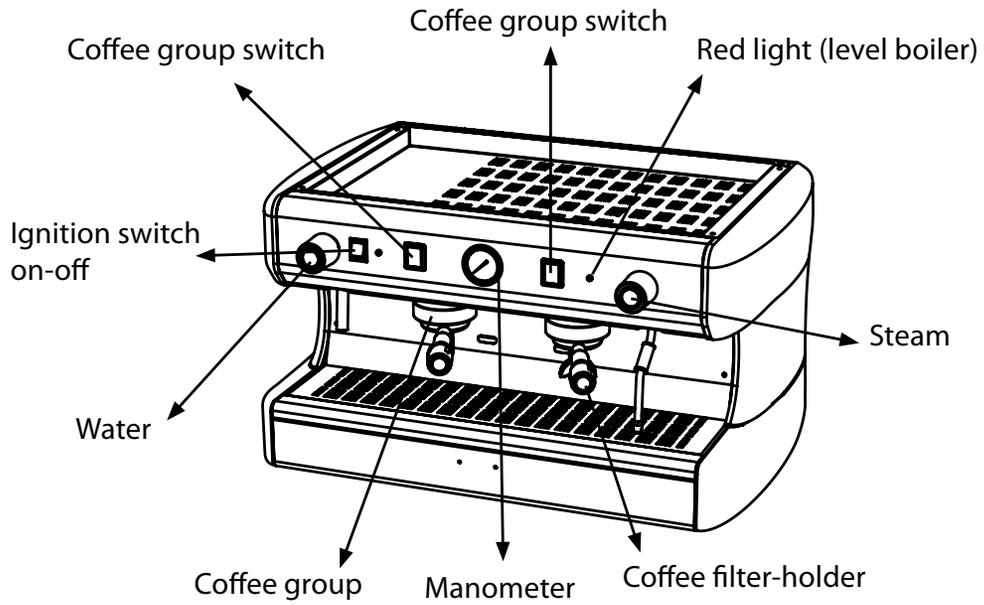


110 v / 50-60Hz
220 v / 50/60Hz



- 1.** Connect the machine to the running water system. (you can also connect it to a carafe or a large water can).
- 2.** Connect the drain box with the crystal PVC hose to the drain tube or, in case you don't have one, to a carafe or to an empty large can.
- 3.** Connect the machine to the wall socket and turn on the switch to position ON (I)
The lights will turn on: red, for water level and green, for resistance.
The water will go into the boiler until its leveled automatically.
The red light in the switchboard will turn off and it will turn on every time water is needed. Wait until the machine heats up, then the manometer will reach 1 bar approximately; in that moment the green light will turn off, which indicates that the machine is ready to function.. This green light will turn on every time the machine needs to recuperate temperature. If the green light is turned on this doesn't prevent to operate normally the machine in all its functions.
- 4.** Once completed all the above mentioned, you can start making coffee. You will have to let the water run with the filter holders in, so it can reach temperature while pressing the group switch.

Load the filter holder with ground coffee, completing its capacity and then press it with the coffee press (which is in the mill). If the grinding is correct, the coffee will come out creamy and will fill the cups in approximately 30seconds. If not, you will have to correct the grinding (see grinder indications).

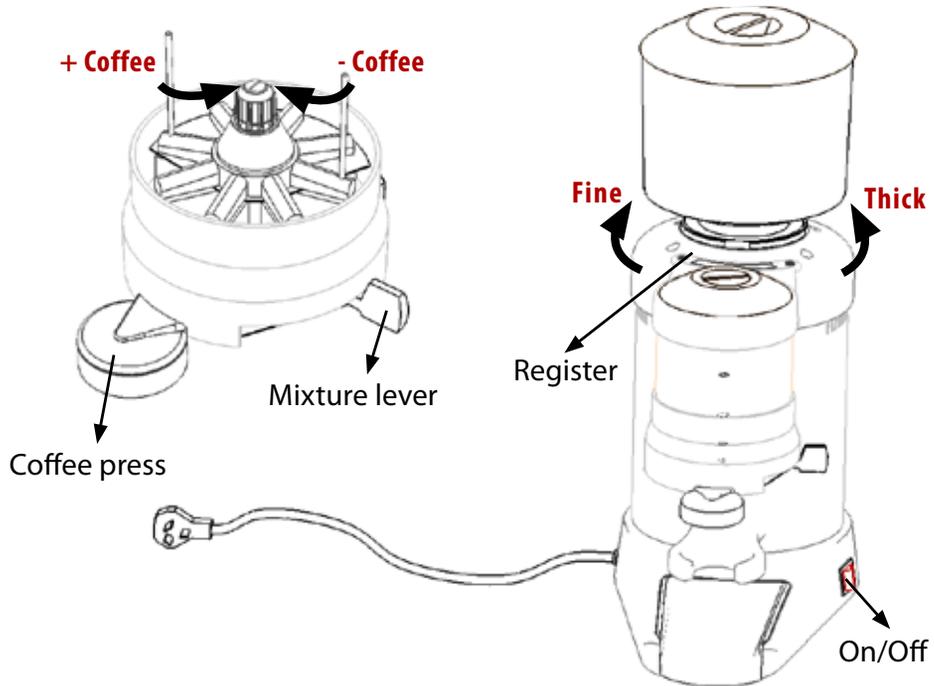

Gringer regulation

To regulate the coffee grinder you have to turn round the register.

Screwing in the register - finer coffee ↺ ↻

Unscrewing the register - thicker coffee. ↻ ↺

Attention!:

- 1) If the coffee runs out too slow, the grinder is too fine.
- 2) If the coffee runs out too fast, the grinder is too thick.

Concordia 1178/86 (C1487DIX)
Cuidad Autonoma de Buenos Aires
Tel. (54 11) 46710852 (rotativas) Fax. (5411) 4636 1072
e-mail: rilo@dd.com.ar
www.rilo.com.ar