




**RINA/PLUS**

Versión: 3.0

Gas

# Instruction manual

More information go to [www.rilo.com.ar/products](http://www.rilo.com.ar/products)

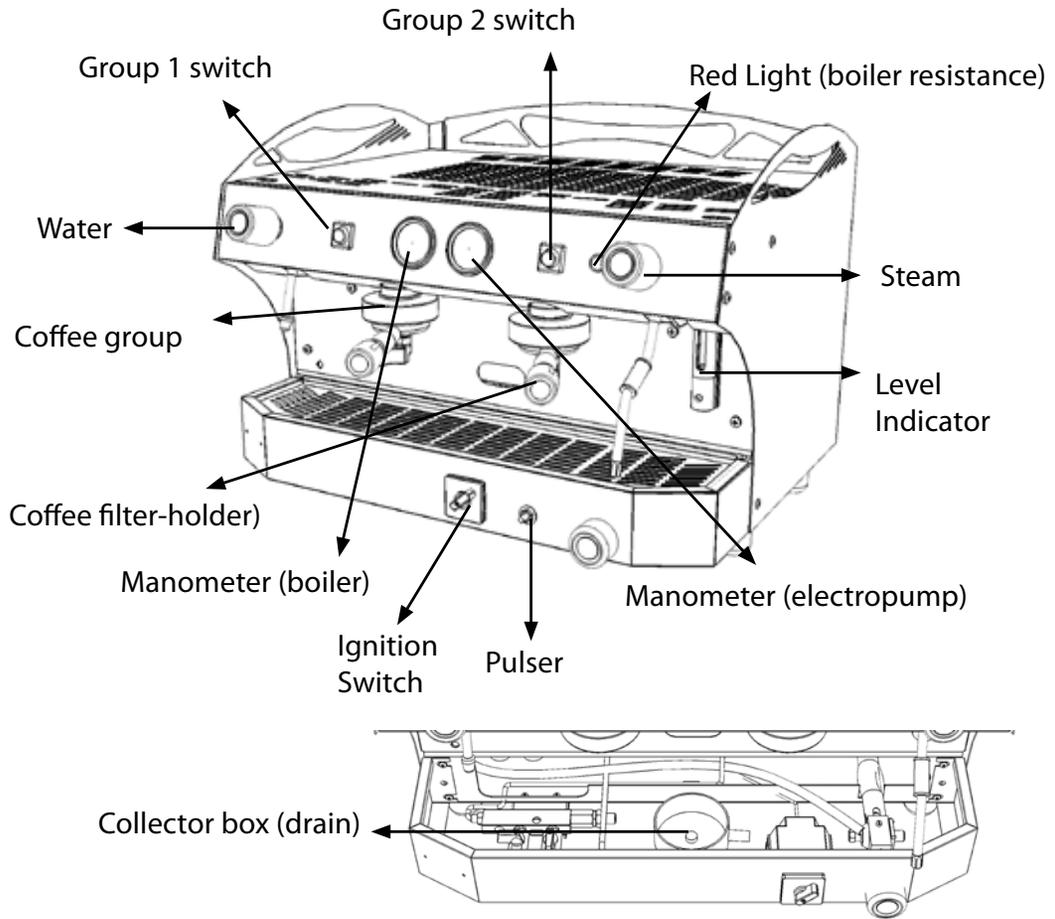

110 v / 50-60Hz  
220 v / 50/60Hz

# RINA

**1.** Connect the machine to the running water system (you can also connect it to a carafe or a large water can).

**2.** Connect the drain box with the crystal PVC hose to the drain tube or, in case you don't have one, to a carafe or to an empty large can.

**3.** Connect the machine to the gas system, gas tap, then connect the it to the wall socket and turn on the switch in I (ON). The water will go into the boiler until its level is reached, 3/4 of the indicator tube.

Turn the gas key on to its maximum, press the push-button, turn on the gas burner, wait a few seconds before releasing the push-button and it will be turned on.


Wait until machine heats up, then manometer will reach approximately to 1 bar indicating the machine is ready to operate. The flame will go up each time the machine needs to regain temperature.

**4.** Once completed all the above mentioned, you can start making coffee.

You will have to let the water run with the filter holders in, so it can reach temperature pressing the group switch.

Load the filter holder with the ground coffee, completing its capacity and then press it with the coffee press (which is in the mill). If the grinding is correct, the coffee will come out creamy and will fill the cups in approximately 30 seconds. If not, you will have to correct the grinding (see grinder indications).

Note: The electropump manometer will go up 9 bar approximately each time a coffee is made.

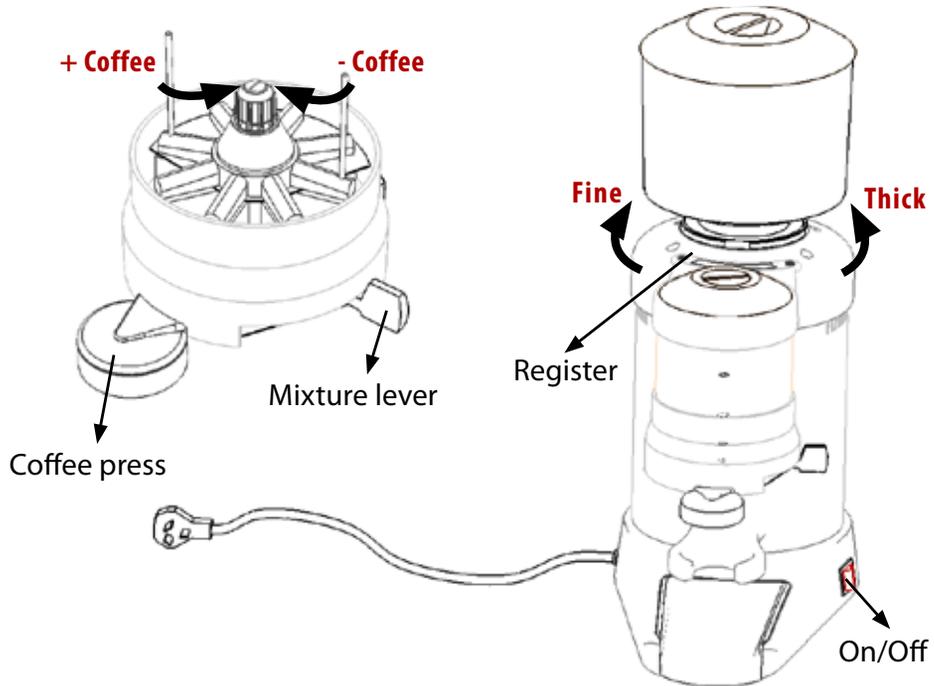

### Gringer regulation

To regulate the coffee grinder you have to turn round the register.

**Screwing in the register - finer coffee** ↺ ↻

**Unscrewing the register - thicker coffee.** ↻ ↺

### Attention!:

- 1) If the coffee runs out too slow, the grinder is too fine.
- 2) If the coffee runs out too fast, the grinder is too thick.

**Concordia 1178/86 (C1487DIX)**  
**Cuidad Autonoma de Buenos Aires**  
**Tel. (54 11) 46710852 (rotativas) Fax. (5411) 4636 1072**  
**e-mail: [rilo@dd.com.ar](mailto:rilo@dd.com.ar)**  
**[www.rilo.com.ar](http://www.rilo.com.ar)**